


euroseats

Item No.: 75.BUR.KLA

Installation guide

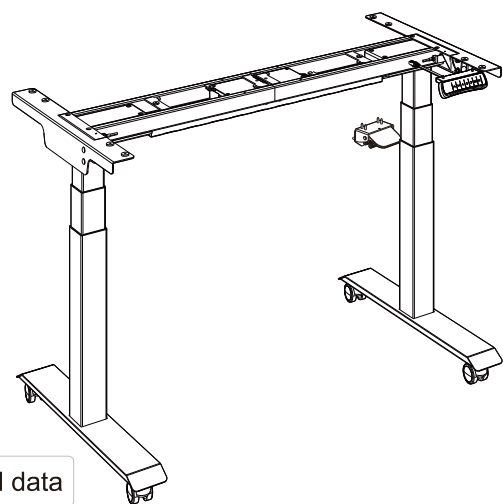

Technical data

Column Stage	3
Max. Weight Capacity	125KG(horizontality)
Height Range	630-1280mm
Width Range	1150-1700mm
Tilting Angle	0°/60°/70°/80°/90°

Accessory list

Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact our customer service department should you have any queries.

No.	Image	Spec	Qty
A		M6	4
B		M6	12
C		M6	8
D		St4.2	8
E		St4.2	4
F		Cable Tie	4
G		St4.2	4
H		Allen Key 4x4mm	1


The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of low power consumption mode condition of electrical and electronic household equipment.
The technical information of low power consumption mode condition:

Mode	Power consumption (Watts)	The period(Minutes)
Low power consumption mode condition	0.3W	1min

The website URL of the electronic instruction manual: www.euroseats.nl/gebruikershandleidingen/

Component list

No.	Part	Qty	No.	Part	Qty
①	Foot	2	②	Lifting Column	2
No.	Part	Qty	No.	Part	Qty
③	Cable Management Tray	1	④	Supporting Beam (with control box)	1
No.	Part	Qty	No.	Part	Qty
⑤	Supporting Plate	1	⑥	Caster (2 with brakes)	4
No.	Part	Qty	No.	Part	Qty
⑦	Handset(optional)+ Optional Screw	1	⑧	Power Plug	1
No.	Part	Qty			
⑨	Shock Pad	2			



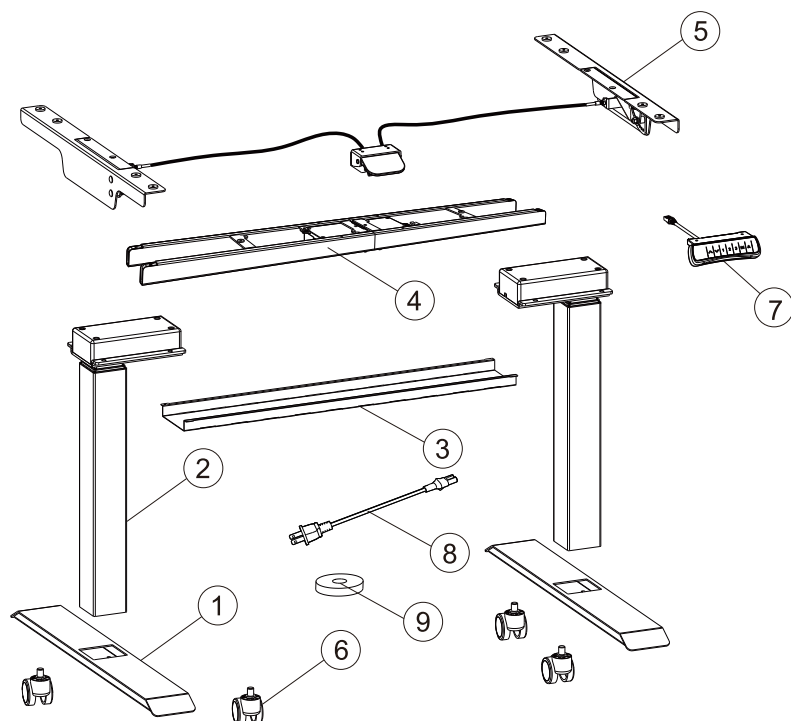


STEP 1

Connect the supporting plate with supporting beam




Please tear off the adhesive of the shock pad before installation

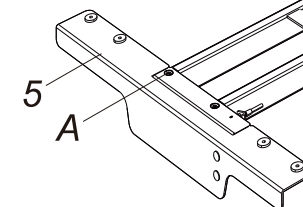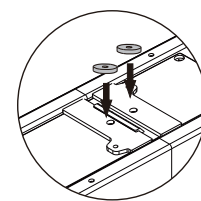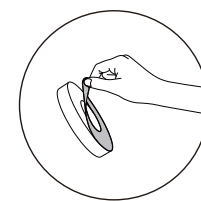

Connect the supporting plate (5) with supporting beam (4) with screws (A) and use allen key (H) to tighten.

STEP 2


Install lifting columns

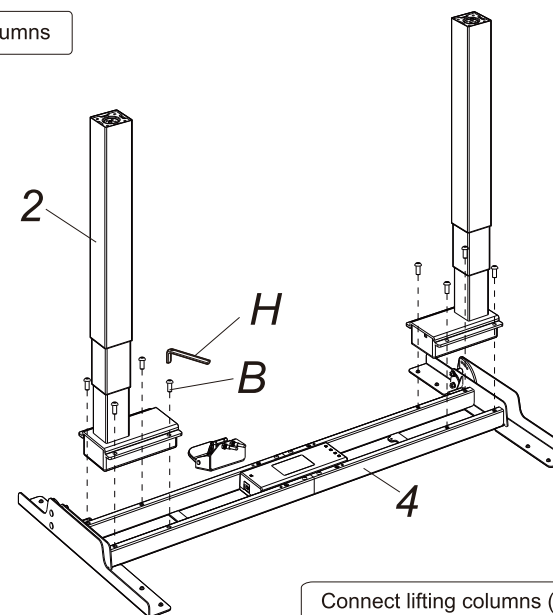

Connect lifting columns (2) to supporting beam (4) with screws (B) and use allen key (H) to tighten.

STEP 3


Install feet

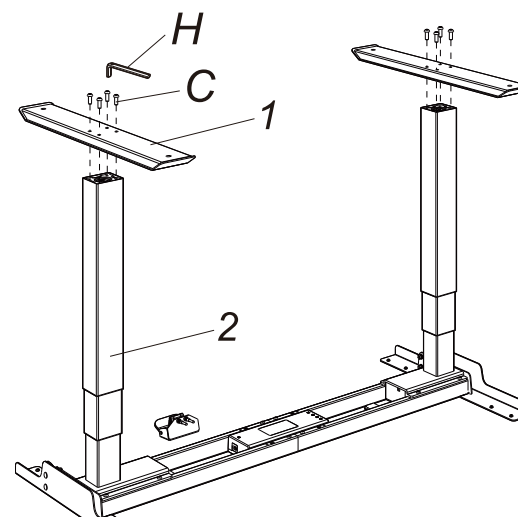

Connect feet (1) to the lifting columns (2) with screws (C) and use allen key (H) to tighten.

STEP 4


Install casters

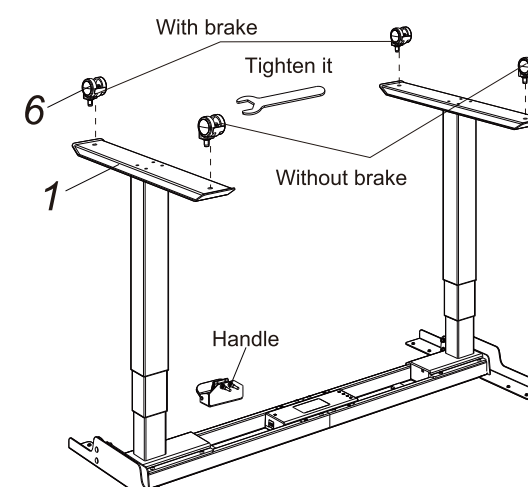

Install casters (6) on the feet (1). Two casters with brakes are installed on the side of the handle as the front side of the table, as shown in the picture, and tighten with a wrench.

STEP 5


Install tabletop, handle and handset

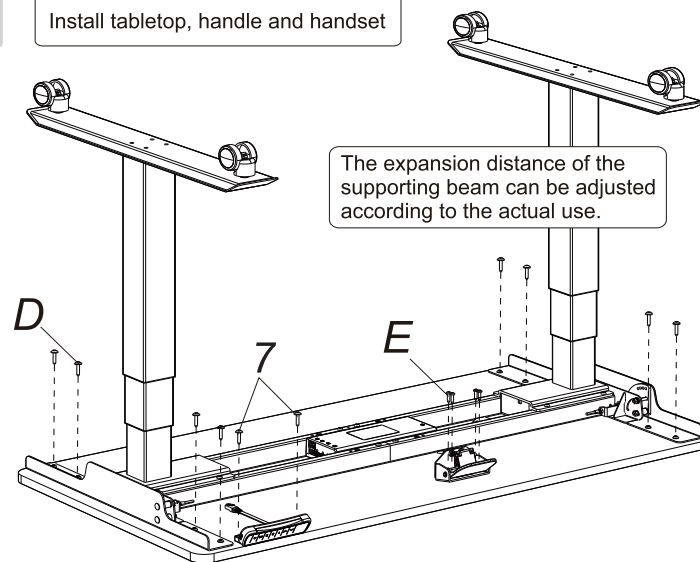


Use screws (D) to install the tabletop on the frame, and use four screws (E) to install the handle in the center on the table. Align it with the edge of the table, as shown in Step 6.




Loosen

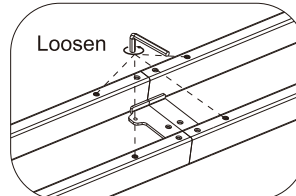


Adjust

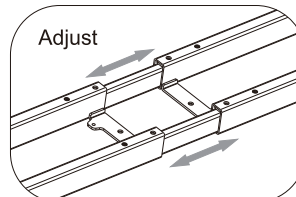

Tighten

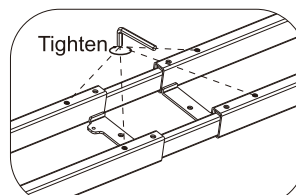


Adjust the tabletop angle

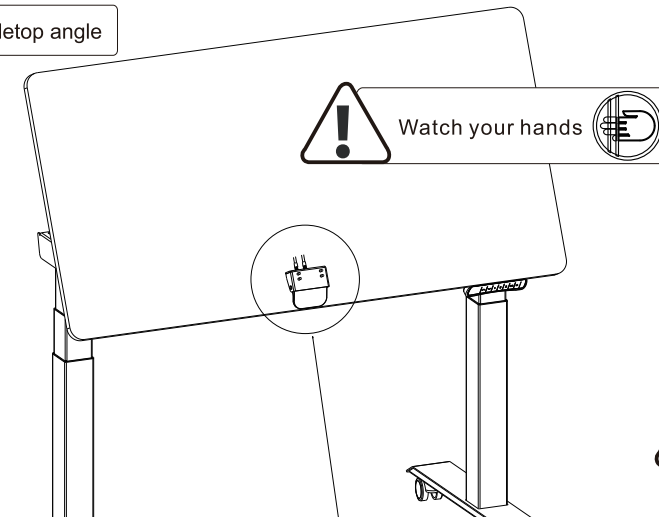

Please adjust the handle according to actual needs, press the handle while turning the table with two hands to a suitable angle, then to loosen the handle and it will lock the tabletop when you hear a "pop".

0°/60°/70°/80°/90° Five-range adjustment

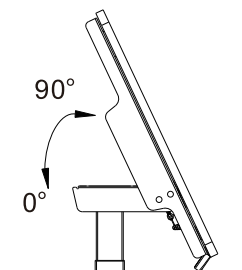



Do not place anything on the table when adjusting the table so as to avoid damage.

STEP 6

Connect all cables to the control box




Fix the wire rope with cable tie (F) and the cable tie can be stick to the tabletop or use screws (G) to fix it on the table.

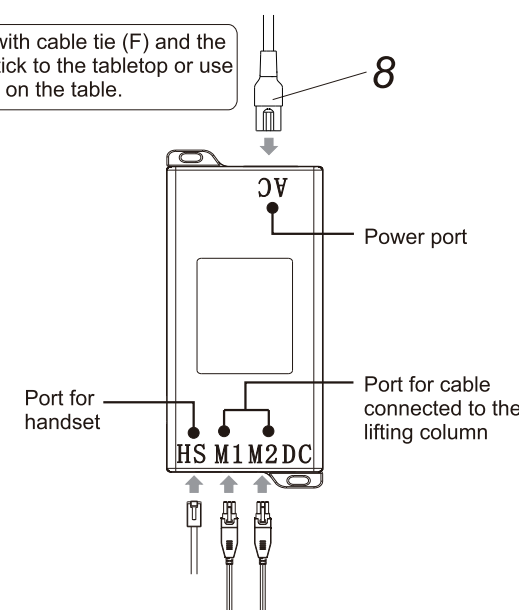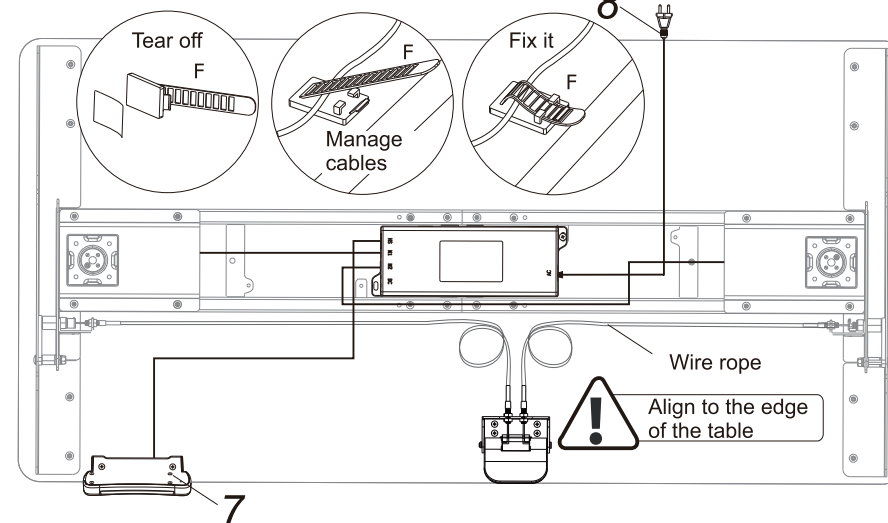




STEP 7

Install the cable management tray

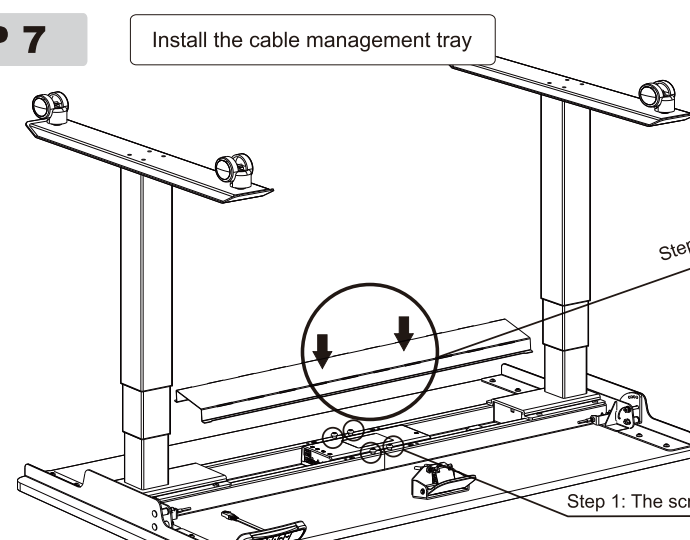

Firstly, rotate the screws (B) incompletely into the supporting beam (4) with an allen key (H), which means do not tighten them. Next, slide one side of the cable management tray (3) into the screws (B), then press the other side into the screws (B). Finally, tighten the screws (B) with an allen key (H).

Step 2: Buckle in the baffle

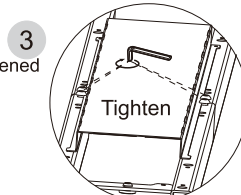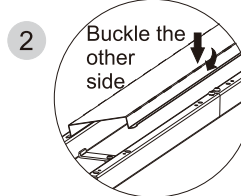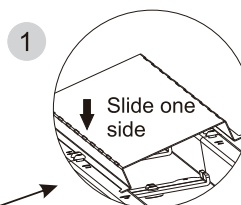

Step 1: The screws are not fully tightened

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well 2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well 2.Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 125kg; 2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1.Reset 2.Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 125kg; 2. Contact your supplier or dealer
Frequently Reset	1. Check if overloaded, max loading: 125kg; 2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;
Not enough up&down height	1. Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twice, it will restore factory settings 2.Contact your supplier or dealer



Attention

- Power supply: AC100V-240V,50/60Hz
- Service Environment: 0-40℃
- Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings of the product before first use.
- Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
- Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
- Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Euroseats B.V.
Deventerweg 7
3771 NP
Barneveld
Netherlands